



PARTS LIST (FIG. 1-3)

The package should contain the following parts:

b 2	aquarium tank with hexagonal base (HEXASET II E27 line sets) or bowl (BOWLSET II E27 line sets)
a 1	bottom frame
a 2	tank
a 3	top frame with hinges
b 1	cover with complete light module
b 2	moveable flap
b 3	casing
b 4	fluorescent lamp fixture
b 5	compact fluorescent lamp integrated with E27 base of wattage stated in technical specification table
b 6	gasket
b 7	screws
b 8	support
c	filtration panel containing one or two filtration baskets with media (except for BOWLSET II φ30 E27 type)
d	CIRCULATOR 350 + pump mounted in the filtration panel (except for BOWLSET II φ30 E27 type)
d 1	pump body
d 2	impeller
d 3	impeller chamber
d 4	output regulator
d 5	pump shock absorber
d 6	set of intake tubes
e	FAN-mikro plus internal filter - only for BOWLSET II φ30 E27 type
f	COMFORTZONE AQ heater with thermostat of wattage stated in technical specification table (except for BOWLSET II φ30 E27 type)
	aquarium set instruction manual
	heater instruction manual
	FAN-mikro plus internal filter instruction manual - only for BOWLSET II φ30 E27 type

CONDITIONS OF SAFE USAGE

The device you purchased was manufactured in conformity with all safety standards currently in force on the area of European Union. For long lasting and safe usage please read the safety conditions below:

The device is designed for usage only indoors and accordingly to its destination.

The device can be powered from a power grid of voltage stated on the device.

A device that is damaged or has a damaged power cord must not be used. The condition of the power cord should be checked prior to every start-up of the device. The power cord must not be repaired, replaced or have any additional elements installed. In case of damaging the cord the entire device should be replaced.

Prior to placing hand in the water, all of the electric devices present in the tank should be unplugged from power.

Prior to opening the light module for maintenance it should be disconnected from power source. All of electronic devices that are included in the set can be connected to power grid and used only when they are assembled and installed according to the following manual.

Light sources other to ones specified in technical data, particularly regular light bulbs, must not be used!

The water level in the aquarium should allow maintaining minimum 15 mm of distance to the light module (more or less at the level of lower edge of the top frame).

Caution! Aquarium must not be moved when filled with water. Bowl tanks must not be picked up by holding them by the edge with one hand, they should always be securely supported from the bottom with both hands.

Light module, pump/filter and heater are designed for constant operation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

CAUTION! The power cord should be connected to the electric grid in the way presented on fig. 4, so that a part of the cord hangs freely below the ballast. The objective is to prevent potential flooding of the ballast with water in case of it condensing on the power cord.

INSTALLATION AND START-UP

The aquarium set should be placed away from windows and other sources of direct exposure to sunlight. It has to be placed stably – it's recommended to use AQUEL stands dedicated to particular tank model. When setting up the tank one should follow instructions obtained in aquarium stores or in specialist literature. Prior to plugging the lighting cover to electric grid and turning on the light the following should be verified:

- the fixture (b4) is attached to the casing (b3)

In case the fixture is not placed in the casing bracket and it is loosened the casing should be removed and the fixture should be secured in its bracket. Then the casing should be attached to the cover using screws (b7) according to the fluorescent lamp replacement instruction in the MAINTENANCE chapter;

- CIRCULATOR pump (d) is placed in its socket and an extension tube with tube or an intake strainer (d6) are placed onto the pump intake (does not apply to BOWLSET II φ30 E27 model);

• COMFORTZONE heater (f) is placed in its socket. In order to provide correct operation of the heater the user should get acquainted with its instruction manual that is included in the set (does not apply to BOWLSET II φ30 E27 type);

- FAN-mikro plus internal filter (only in BOWLSET II φ30 E27 model) should be placed in the tank and started. It should be correctly maintained later on. In order to provide correct operation of the filter the user should get acquainted with its instruction manual that is included in the set.

Prior to starting the aquarium equipment the tank should be filled with correct amount of water. Its surface should be close to the lower edge of the top frame (a3) so that the CIRCULATOR pump (d) inlet is submerged in water when the pump is placed in its socket at the same time leaving at least 15 mm of space between the water surface and the lamp casing. It should be remembered that due to evaporation the water level goes down and in case of such need the evaporated amount should be supplemented.

Starting of CIRCULATOR pump (d) is performed by placing the plug in a power socket. In order to start the filter operation immediately after first usage of the pump it is recommended to squeeze out air from pores of sponge cartridges placed in the filtration baskets. The flow of pumped water can be adjusted by turning the pump body as it is shown on figure 2. The pump output should be chosen so that the filtration media placed in the baskets were fully covered with the flowing water and at the same time the water should not overflow the filtration panel upper edge.

Starting of COMFORTZONE heater (f) is performed by placing the plug in a power socket. The required water temperature should be set according to the instructions present in heaters instruction manual enclosed in the set (does not apply to BOWLSET II φ30 E27 type aquaria).

Starting of FAN-mikro plus internal filter (applies to BOWLSET II φ30 E27 model) is performed by placing the plug in a power socket. Output regulation of the filter is performed according to its

instruction manual that is enclosed in the set.

In order to start the light module its plug should be placed in a power socket, and it should be turned on or off using the switch installed on the power cord.

MAINTENANCE

In case of the fluorescent lamp not lighting up despite connecting to the power, unexperienced user should address an electrician and show the electrician the undermentioned description. A user with some experience with electrical issues can replace the fluorescent lamp (b5) by himself. It should be emphasized that due to proximity of water the appropriate degree of watertightness of the light module should be maintained. Therefore when replacing the fluorescent lamp one should act precisely according to the undermentioned instructions.

- the device should absolutely be disconnected from the power network by removing light, pump/filter and heater plugs from their power sockets,
- the lighting cover should be removed from the hinges – in vertical position by pushing the bottom on both sides (according to figure 4) - and placed bottom up on a table e.g. on a towel (that action is recommended to increase the comfort of operation) and wiped until dry - (the next steps are presented on figure 5)

• the screws (b7) should be removed, the casing (b3) should be removed from the cover (b1) together with the fixture (b4), the fluorescent lamp (b5) and the gasket (b6). One should pay attention to check whether the gasket is clean and correctly set in the groove of the housing (b3). In case of such need the gasket should be washed in lukewarm water and after drying lubricated with vaseline. After removing the gasket from its groove and the cover frame securing the gasket should be carefully cleaned. Then the gasket should be carefully placed back in the groove.

CAUTION: The gasket, the cover and the casing should not be scraped with any metal tool! Only soft cloth or sponge can be used. The surface of the groove and the frame should stay undamaged.

The gasket must not be damaged. In case of damaging the gasket it should be replaced with a new one.

All of the above actions should be performed in dry conditions. It must not be allowed for the water to reach the inside of the casing.

- replace the burnt out compact fluorescent lamp and reassemble the lighting module in reverse order to the one described above, appropriately driving the screws (b7).

CAUTION: The screws should be screwed with the utmost care. They cannot be tightened too weakly as it will not provide appropriate tightness of the light module. On the other hand they should not be tightened too strongly as the mountings of the casing (b3) and/or cover (b1) sockets can be damaged under the screws. The ideal moment of tightening the screws is 0.6 Nm.

The light module with damaged casing or cover sockets under the screws cannot be used any further. Damaged casing (b3) and/or damaged cover (b1) should absolutely be replaced.

- the cord should be placed in small tracks on the cover and the complete cover should be reassembled in reverse order until it clicks into its place (according to fig. 4)
- switch the lighting on.

In case of any problems concerning the usage of the light module, exceeding the fluorescent lamp replacement procedure, contact with manufacturer's technical help is necessary.

CIRCULATOR pump (d) is powered by a watertight, synchronous engine that has limited maintenance requirements. If you notice that the pump loses its efficiency or does not start after turning it on you should: disconnect the pump from the power grid, open and support the cover. One should make sure that the pump plug is not dipped in water when the power cord is pulled through the opening. Remove the pump from the socket, remove the output regulator (d4) and impeller chamber (d3) by rotating them. Remove the impeller (d2), carefully clean the impeller and impeller shaft in the pump body (d1). Reassemble the pump in reverse order. After placing the impeller on the shaft it should rotate with no resistance. The pump should be placed back into its place by pressing the output regulator (d4) in the shock absorber (d5).

FAN-mikro plus internal filter maintenance (applies to BOWLSET II φ30 E27 model) should be performed according to the enclosed instruction manual of the filter.

With time the filtration cartridges get clogged because of the impurities that are deposited in them. In such case the pumped water does not flow through the media but it returns to the tank through the safety opening. Therefore in order to maintain constant water clarity it is recommended to clean and replace the filtration cartridges regularly. Removable container and baskets facilitate cleaning of the filtration media. The baskets contain phenol-free sponge with pores of various density. The sponge provides mechanical filtration and thanks to particularly easy development of bacteria cultures, biological filtration. Other filtration media can also be used, e.g. BioCeramax – ceramics, ZeoWonder – zeolite, Carboxam – active carbon ZeoCarbon – mix of zeolite and carbon. It is recommended to use only soft cloth and gentle cleaning agent not containing detergents to clean the cover.

COMFORTZONE heater does not require any special maintenance procedures. In case of such need the heater body can be cleaned of algae and scale using a sponge or soft cloth (see – enclosed instruction manual for the heater).

DISASSEMBLY AND DISPOSAL

It is forbidden to dispose of used electric and electrical equipment in a trash bin. Segregating and proper utilization of this kind of waste leads to conserving the resources of natural environment. The user is responsible for delivering the used product to a specialized collection point where it will be accepted free of charge. You can obtain information about such a facility at the local authorities at the product seller.

GUARANTEE CONDITIONS

The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination.

Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void.

In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

MONTAŻ I URUCHOMIENIE

Zestaw akwariowy powinien być umieszcowany w miejscu bez bezpośredniej ekspozycji na promieniowanie słoneczne. Musi być ustawiony stabilnie – zaleca się zastosowanie dedykowanych do danego modelu szafek AQUEL. Przy uruchomieniu akwarium należy postępować według wskazówek umieszczonych w sklepie branżowym lub z instrukcją fachową. Podczas podłączania pokrywy oświetleniowej do sieci elektrycznej i włączeniem oświetlenia należy sprawdzić, czy:

- oprawa (b4) jest przymocowana do klosza (b3)

W przypadku gdy oprawa nie znajduje się w sporniku klosza lecz włożyć ją do gniazda, należy zdjąć pokrywę (b1) i włożyć oprawkę do gniazda.

• pumpa CIRCULATOR (d) jest umieszciona w swoim gniazdku, a rurka przewodząca do pokrywy wkrętami (b7), według instrukcji wymiany światówka w rozdziale KONSERWACJA;

• pompka CIRCULATOR (d) jest umieszciona w swoim gniazdku, a rurka przewodząca do pokrywy wkrętami (b7), według instrukcji wymiany światówka w rozdziale KONSERWACJA;

• grzałka COMFORTZONE (f) jest umieszciona w swoim gniazdku. W celu zapewnienia prawidłowej eksploatacji grzałki należy zapoznać się z załączoną w zestawie instrukcją jego obsługi (należy sprawdzić, że jest to dla typu BOWLSET II φ30 E27);

• filtr wewnętrzny FAN-mikro plus (tylko w modelu BOWLSET II φ30 E27) należy umieścić w zbiorniku i uruchomić – później również konserwować – w celu zapewnienia prawidłowej eksploatacji filtra.

Należy zapoznać się z załączoną w zestawie instrukcją obsługi.

Akwarium przed uruchomieniem jego wyposażenia należy napełnić odpowiednią ilością wody, blisko poziomu dolnej krawędzi górnej ramki (a3), tak aby wylot pompki CIRCULATOR (d) włożony na swoje miejsce był otoczony wodą, a między kloszem a poziomem wody pozostawało przynajmniej 15 mm wolnej przestrzeni. Należy pamiętać, że wskutek parowania poziom wody obniża się i w razie potrzeby należy uzupełniać zawartość akwarium.

Uruchomienie pompki CIRCULATOR (d) następuje poprzez włożenie wtyczki do gniazda sieciowego. W celu natychmiastowego działania filtracji zaleca się po pierwszym włożeniu pompki wyciągnąć poziom wody.

Przeprływanie wody można regulować poprzez obracanie korpusu pompki, jak jest to pokazane na rysunku 2. Należy tak dobrze wydjąć pompkę, aby media filtracyjne umieszczone w koszykach były całkowicie przykryte przepływającą wodą, a jednocześnie nie przekraczały poziomu wody.

Uruchomienie grzałki COMFORTZONE (f) następuje poprzez włożenie wtyczki do gniazda sieciowego. Po położeniu wtyczki na gniazdo akwariów znajdują się w załączniku do instrukcji instalacji i obsługi.

Uruchomienie filtra wewnętrznego FAN-mikro plus (tylko w modelu BOWLSET II φ30 E27) następuje poprzez włożenie jego wtyczki do sieci. Regulację wydajności tego filtra można wykonać według załączonej instrukcji obsługi tego filtra.

Do uruchomienia oprawy oświetleniowej należy je wtyczyk włożyć do gniazda, a oświetlenie włączyć

WYKAZ CZĘŚCI (RYS 1-3)

Opakowanie powinno zawierać następujące elementy:

a 1	zbiornik akwariowy o podstawie sześciokątnej (zeszty linii HEXASET II E27 lub kula (zeszety linii BOWLSET II E27))
a 2	zbiornik
a 3	rama góra z zawiasami
b 1	pokrywa
b 2	klapka ruchoma
b 3	klosz
b 4	oprawa światówka
b 5	światówka kompaktowa integracyjna z trzonem E27 o mocy podanej w tabeli z danymi technicznymi
b 6	uszczelka
b 7	wkręty
b 8	podpora
c	panel filtracyjny zawierający jeden lub dwa koszki filtracyjne wypełnione mediami (z wyjątkiem typu BOWLSET II φ30 E27)
d	pompa CYRKULATOR 350 + zamontowana w panelu filtracyjnym (z wyjątkiem typu BOWLSET II φ30 E27)
d 1	korpus pompy
d 2	wirnik
d 3	komora wirnikowa
d 4	regulator wydajności
d 5	amortyzator pompki
d 6	zestaw rurek zaszyjących
e	filtr wewnętrzny FAN-mikro plus – tylko do typu BOWLSET II φ30 E27
f	grzałka COMFORTZONE AQ z termostatem o mocy podanej w tabeli z danymi technicznymi (z wyjątkiem typu BOWLSET II φ30 E27)
	instrukcja obsługi zestawu

